
SECURITY COWL

FITTING GUIDE

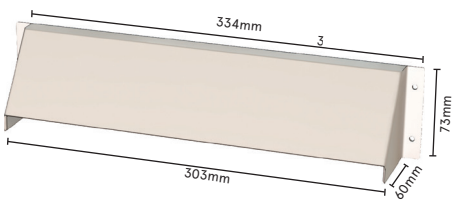

CONTENTS

- Security Cowl
- Fixing screws

TOOLS REQUIRED

- Drill (hand or power)
- Pencil or marker

INSTALLATION DETAIL

NOTE
For use with Firemaster P207 Letterplate

STEP 1
Remove the security cowl from the packaging and place above the fitted letterplate.

STEP 2
Slide the security cowl down into position, ensuring that it covers the letterplate.

STEP 3
Take a pencil or marker and mark the positions for the pilot holes.

STEP 4
Remove the security cowl and using a drill make 3mm pilot holes.

STEP 5
Replace the security cowl matching the fixing holes to the pilot holes and fix screws in place.

NOTE
Recommendations as to methods for use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete any installation detail without prior notice.

V2

LORIENT
ASSA ABLOY

ASSA ABLOY LTD T/A LORIENT
Endeavour House
Fairfax Road
Heathfield Ind Estate
Newton Abbot
Devon TQ12 6UD
United Kingdom

+44 (0)1626 834252
www.lorientgroup.com

All rights reserved. No part of this fitting guide may be reproduced, stored in a retrieval system, or transmitted in any means, electronic, mechanical, photocopying, recording or otherwise without the written permission of Lorient.

© 2024 ASSA ABLOY Ltd T/A Lorient. Lorient is a registered trade mark of ASSA ABLOY LIMITED in England.